

# BOWLING

VIDEOCART™

21



FAIRCHILD

## On Your Mark

Challenge a friend or try to beat your own high game with this Videocart™ cartridge.

## Get Set

Insert the cartridge into your unit with the edge label toward you and the top label facing up. Press the RESET button. A bowling lane with a **G?** will appear on the screen.

## Go

Select the type of game and number of players by pressing the appropriate button:

- Button 1 — One player, Regular Game
- Button 2 — Two players, Regular Game
- Button 3 — One player, Split Game
- Button 4 — Two players, Split Game


Next an **S?** will appear on the screen requesting selection of speed of play.

- Button 1 — slow
- Button 2 — normal
- Button 3 — fast
- Button 4 — fastest

After 10 seconds, if you have not selected a speed, the computer automatically selects the one-player, regular game at the slow speed and starts to play by itself. If you want to play, make a movement with either hand-controller to return control to you.

## THE GAME

For one player, only the red player on the left of the screen is active. For two players, the blue player on the right of the screen is also active. The color of the ball moving to-and-fro in front of the lane indicates whose turn it is to bowl.

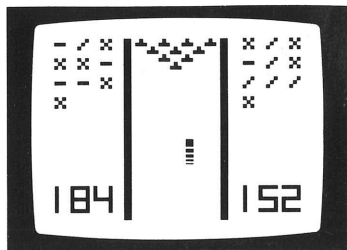

The player's score appears at the screen bottom and is the score for the last frame that could be totaled. Frames are marked at the top of the screen, with standard bowling symbols:

- Open frame      X Strike      / Spare

Frames not yet scored are written in green and change to the player's color when the total pins are included in the score.

## **HOW THE HAND CONTROLLERS WORK**

For the one-player version, use the right handcontroller to move the red player. For the two-player games, also use the left handcontroller to move the blue player.

Use the handcontroller to control ball movement down the lane.

Push forward to release the ball.

Push left to start the ball curving left.

Push right to start the ball curving right.

Push down to play another game.


Before being released, the ball moves back and forth across the front of the lane. Push forward when the ball is at the lane position you desire and push left or right to curve the ball left or right. Once you have started a curve, you cannot change it.

## Regular Game

The Regular Game follows normal bowling procedure. Each frame begins with 10 pins standing.

## Split Game

In the Split Game, each frame starts with some combination of less than 10 pins. You have two balls to knock down the remaining pins. Can you do it in one?

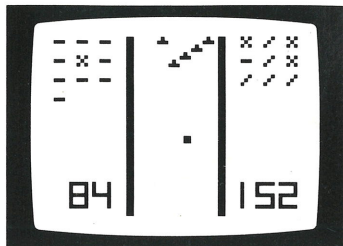

The Split Game is scored like the Regular Game.

Currently the best game by a Fairchild player has been 284. Can you get 300?

## Have Fun

If you have questions about this Videocart™\*\* cartridge or your Channel F Video Entertainment System, call the toll free numbers included with your game.

Other exciting Videocart cartridges are available from your Fairchild dealer or, for more information, write:

**Fairchild Video Products**  
**3105 Alfred Street**  
**Santa Clara, CA 95050**

**Exclusively for use with**  
**the Fairchild Video Entertainment Systems**  
**— Channel F and Channel F System II.**

\*VIDEOCART is a trademark of Fairchild Camera and Instrument Corporation  
Copyright © 1978    Made in Singapore    Printed in U.S.A.